


HOW TO CONVERT A KLEIN TOOLS 6-POINT SUSPENSION FOR 4-POINT COMPATIBLE KLEIN TOOLS HARD HATS

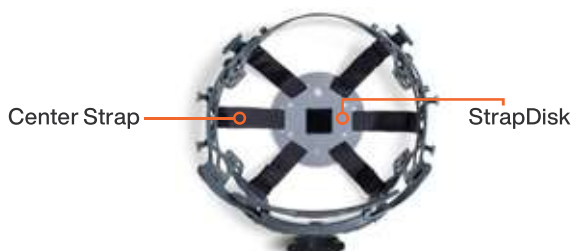

CONVERSION TO 4-POINT SUSPENSION

Reattach the sweatband on to the suspension.



LOCATE THE ANCHOR SLOTS

Verify that your hard hat has the 2 side anchor slots. If NOT, then proceed to convert the 6-point suspension.



STORE THE CENTER STRAP FOR FUTURE USE



REMOVE EXISTING SUSPENSION

Detach the old suspension in the hard hat. Remove and save the sweat band and top pad, set aside. Discard the old suspension.



REINSTALL THE SUSPENSION INTO THE KLEIN HARD HAT

Secure the modified 4-point suspension back into the hard hat shell.



LOCATE CENTER STRAP AND STRAP DISK

Identify the center strap that connects through the strap disk. See suspension image on top.



REATTACH THE TOP PAD

Ensure the top pad sits properly.



REMOVE THE CENTER STRAP

Slide the center strap through the slots of the strap disk.



VERIFY INSTALLATION

Ensure 4-Point suspension is properly secured in the hard hat slots as shown. Try on to verify fit.



FULLY REMOVE THE CENTER STRAP

Ensure the center strap is completely separated from the strap disk. With the center strap removed, your suspension is now configured as a 4-point system.



COMPATIBLE WITH KLEIN SHELLS

Seamlessly integrates with Klein Tools Type 1 Hard Hat shells (Not compatible with Klein Tools Type 2 Hard Hats, Safety Helmets, Carbon Fiber, and High Temp Hard Hats)